



This is a reminder for those who have installed this style hose bib vacuum breaker on your outdoor faucets. This style is not self draining and needs to be manually drained to prevent freezing.



To drain faucet: shut off faucet, disconnect hose and push stem (shown above) to one side with finger.